
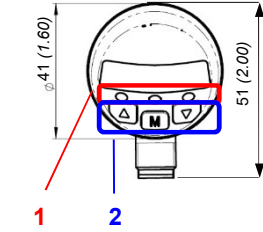


11 Technical Data

	BTS3000
Measuring element	Temperature sensor PT100 class A
Measuring Ranges	0 ... 100 °C; -30 ... 140 °C / 32 ... 210 °F; -22 ... 280 °F
Display	4-digit 14-segment LED display, red, digit height 9 mm
Transistor switching outputs PNP (IO-link version with PNP, NPN, PP)	1 or 2 x NO/NC function (programmable), adjustable switching time delay 0 ... 50 s
Operating temperature range	-10 ... +60 °C / +14 ... +140 °F
Process connection	G ¼" M, ¼" NPT M, G ½" M, ½" NPT M, 7/16-20 UNF
Protection system <sup>1)</sup> / class	IP65, IP67; UL-Type 4X, 6 / III
Electrical connection	Plug 4/5/8-pin, M 12x1
Power supply	15 ... 28 V DC / relay output: 20 ... 28 V DC
For further technical data and options please refer to the data sheets	

<sup>1)</sup> The specified protection classes apply only in mated condition with mating connectors of the respective protection class.

Operating and display elements/Dimensions

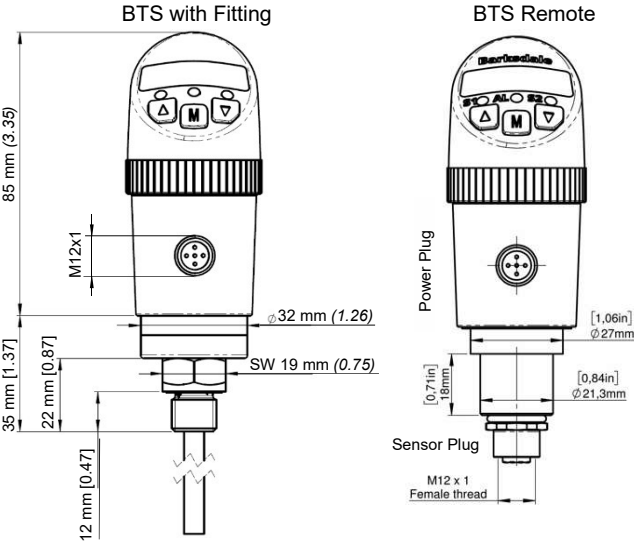

Item 1: LEDs	
AL	(red) – Alarm
S1	(red) – switching point 1
S2	(red) – switching point 2

Item 2: Keys	
For functions refer to chapter 8 "Programming" on page 5.	

Operating Instructions  
Dual Temperature Switch BTS3000 & BTS Remote



Operating Instructions .....	1
1 Intended Applications .....	2
2 Safety Instructions .....	2
3 Standards .....	3
4 Warranty/Guaranty .....	3
5 Installation .....	3
6 Commissioning / Operation .....	4
7 IO-link version .....	5
8 Programming .....	5
9 Maintenance/Cleaning .....	11
10 Decommissioning .....	11
11 Technical Data .....	12

Art. no.: 923-2109  
Index F, 15-02-2023  
Software version: 1.2 or higher

Specifications are subject to changes without notice!

**Barksdale Inc.**  
3211 Fruitland Avenue  
Los Angeles, CA 90058-0843  
U.S.A.  
Phone: (323) 589-6181  
Fax: (323) 589-3463  
e-mail: sales@barksdale.com  
www.barksdale.com

**Barksdale GmbH**  
Dorn-Assenheimer Straße 27  
D-61203 Reichelsheim  
Phone: +49 (6035) 949-0  
Fax: +49 (6035) 949-111 and 949-113  
e-mail: info@barksdale.de  
www.barksdale.de

## 1 Intended Applications

The dual temperature switch monitors media temperatures into which the probe is immersed and has up to two switching outputs and one analog output.

The switch may only be used in the specified fields of application.

The temperature ranges must be within the permissible limits. The stated pressures and electrical load values must not be exceeded.

Observe also the applicable national safety instructions for assembly, commissioning and operation of the switch.

The switch is not designed to be used as the only safety relevant element in pressurized systems according to DGR 2014/68/EU (PED).

## 2 Safety Instructions

The safety instructions are intended to protect the user from dangerous situations and/or prevent material damage.

In the operating instructions the seriousness of the potential risk is designated by the following signal words:

### **DANGER!**

Refers to imminent danger to life and health of men.

Nonobservance will result in serious injuries, or even life-threatening injuries and death.

### **WARNING!**

Refers to a potential hazard.

Nonobservance may result in serious injuries, or even fatal injuries and death.

### **CAUTION!**

Refers to a potential hazard.

Nonobservance may result in light injuries.

### **Attention!**

Refers to a potential hazard.

Nonobservance may result in damage to the switch and/or to the plant.

### **NOTE**

Refers to important information essential to the user.



### **Disposal**

The switch must be disposed of correctly in accordance with the local regulations for electric/electronic equipment.

The switch must not be disposed of with the household garbage!

## 3 Standards

The standards applied during development, manufacture and configuration are listed in the CE conformity and manufacturer's declaration.

## 4 Warranty/Guaranty

Our scope of delivery and services is governed by the legal warranties and warranty periods.

### **Terms of guaranty**

We guarantee for function and material of the dual temperature switch under normal operating and maintenance conditions in accordance with the statutory provisions.

### **Loss of guaranty**

**The agreed guaranty period will expire in case of:**

- incorrect use,
- incorrect installation or
- incorrect handling or operation contrary to the provisions of these operating instructions.

No liability is assumed for any damage resulting therefrom, or any consequential damage.

Refer to Barksdale "Standard Terms and Conditions".

## 5 Installation

**Attention!** Jolts and heavy vibrations must be avoided during transport. Even if the switch casing remains undamaged, inside parts may be damaged and cause malfunctions.

**The temperature switch may only be installed and electrically connected by trained and instructed staff according to state-of-the-art standards.**

### **DANGER! Electric shock and/or explosion!**

Install the switch only in systems where the maximum temperature  $T_{max}$  and the maximum pressure  $P_{max}$  are not exceeded (see type label). Only install the switch when deenergized (electrically and hydraulically/pneumatically).

Mount temperature switches with fitting using a wrench SW 19 mm (3/4") and tighten it to a torque of max. 22 Nm (190 in/lb).

Adjustment of the orientation of the display and/or the process connection (rotatable) must be carried out by hand. Do not use tools!

The housing temperature of the device must not exceed 70 °C (158 °F) when operated continuously at the maximum ambient temperature (temperature is measured on the hexagon head of the process connection). This must be ensured by special provisions.

If temperature switches with fitting reaches media temperature above 70 °C (158 °F), the thread of the process connection must not immerse into the medium.

The mounting situation of temperature switches with fitting (immersion depth, probe length, operating conditions) largely determines the accuracy of the device to be achieved.


Electrical connection is to be carried out dependent on the type of switch (see type label) according to the chart below. Wrong assignment of the connections may cause malfunctions or incorrect switch outputs.

**Electrical connection**


Plug M 12x1 4/5/8-pin	Model with 2 switching points	Model with 1 switching point and 1 analog output	Model with 2 switching points and 1 analog output	Model with 2 switching points (relay contacts)	
	Signal output code 1, 7	Signal output code 2, 3	Signal output code 4, 5, 8	Signal output code 6	
1	+Ub	+Ub	+Ub	+Ub	NC
2	SP2	Signal	Signal	SP1a	
3	OV	0V	0V	SP1b	
4	SP1 / IO link <sup>1</sup>	SP1	SP1 / IO link <sup>1</sup>	0V	
5	-	-	SP2	SP2a	NO
6	-	-	-	SP2b	
7	-	-	-	-	
8	-	-	-	Housing	

<sup>1</sup> only code 7 and 8

**Power Plug**

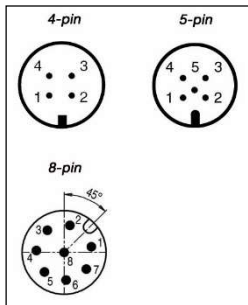

**Sensor Plug BTS Remote**

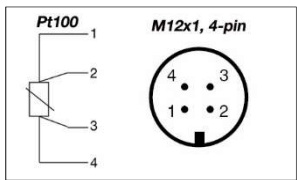

BTS Remote shall be powered with power supply GND connected to Earth.

**6 Commissioning / Operation**

The temperature switch may only be commissioned and operated by authorized staff.

**⚠ WARNING! Hot surfaces!**

During operation with higher temperatures the casing surface may become very hot! Wear protective gloves!

**⚠ WARNING! Electric shock!**

Do not put the switch into operation when the switch itself or the connection cable is damaged.

After having been switched on the switch runs through a self-test. If the software recognizes an error during the self-test or during operation, this is signaled in the display by "Err" and the corresponding message, refer to Error list on page 7. The red LEDs S1 and S2 signal the activity of the two switching points.

Operation via three plastic film keys is menu-driven. ▲, ▼ and M

**Attention!** The keys may be damaged by pointed, hard objects. Do not use any pointed, hard objects for making entries.

For information about the factory settings for the parameters and how to change them please refer to the next chapter 8 „Programming“.

**7 IO-link version**

**General information**

This device features an IO-link communication interface which requires an IO-link capable module (IO-link master) for operation. The IO-link interface permits direct access to process and diagnostic data and offers the possibility of parametrising the device during operation. Moreover communication via a point-to-point connection using a USB adapter cable is possible.

**Device-specific information**

The IODDs required for the configuration of the IO-link device and detailed information about process structure, diagnostic information and parameter addresses are available at ->IODD finder and on <https://www.barksdale.de/de/download/iolink/>. To find the required information please enter the order code in the search mask. IO-link devices manufactured before 04-01-2019 do not support different polarities of the switching outputs.

**NOTE:** Since process connection, seal and probe length have no influence on the IO-link communication you must replace them by "xx". E.g. BTS372VM0025M4 = BTS37xxMxxxxx4x  
**TIP:** Use the autocomplete function of the IODD finder by entering the article no. character by character.

**8 Programming**

Navigation function	Symbol (membrane key)
Menu descending	▼
Menu ascending	▲
Horizontal movement in menu, select menu item	M
Parameter change ascending	▲
Parameter change descending	▼
Adopt parameter change and return to current menu item	M
Return to measured value display	Press ▲ + ▼ simultaneously

**Parameter**

Parameter	14-segment display	Description
SP1/SP2 <sup>1</sup>		Hysteresis function: switching point of solid state contact
FH1/FH2 <sup>1</sup>		Window function: Window High solid state contact
rP1/rP2 <sup>1</sup>		Hysteresis function: hysteresis of solid state contact
FL1/FL2 <sup>1</sup>		Window function: Window Low solid state contact
EF		Extended programming functions
rES		Reset parameters to factory settings
dS1/dS2 <sup>1</sup>		Switching time delay – the set contact rating must be permanently exceeded to trigger a switching function
dr1/dr2 <sup>1</sup>		Switching time delay – the contact rating must be permanently lower than the set contact rating to trigger a switching function
Ou1/Ou2 <sup>1</sup>		Switching function of solid state contact Hno = hysteresis function, NO contact HNC = hysteresis function, NC contact FNO = window function, NO contact FNC = window function, NC contact diA = diagnostic function, NO contact (only Ou2)
Pol 1/ Pol 2 <sup>3</sup>		Select polarity of switching output: PP, NPN, PNP
uni		Select unit: °C, K, °F If the measuring range is outside the display range, unit selection is not allowed. The parameter "uni" is not displayed.
OuA <sup>2</sup>		Analog output I = 4... 20 mA U = 0... 10 V I.INV = 20... 4 mA U.INV = 10... V
ASP <sup>2</sup>		Analog start value

Parameter	14-segment display	Description
AEP <sup>2</sup>		Analog end value
dPA <sup>2</sup>		Damping of analog output
ErS.A <sup>2</sup>		Error signal of analog output Values: < 3.6 or > 22 or Off
Hi		Saved value of highest temperature measured
Lo		Saved value of lowest temperature measured
COF		Offset correction (max. 10 % of measuring range)
ddis		Damping display
Fdis		Rotate display through 180°
udiS		Unit indication
Firm		Firmware version
Lock		Software lock

<sup>1</sup> only models with 2nd switching contact


<sup>2</sup> only models with analog output

<sup>3</sup> only IO-link devices

**Error list**

Parameter	14-segment display	Description
sens		Sensor defect
SC1		Short circuit, solid state contact 1
SC2		Short circuit, solid state contact 2
AOut		Open output, short circuit
OL		Sensor limit positive
UL		Sensor limit negative
KEY		Internal defect

Menu Structure

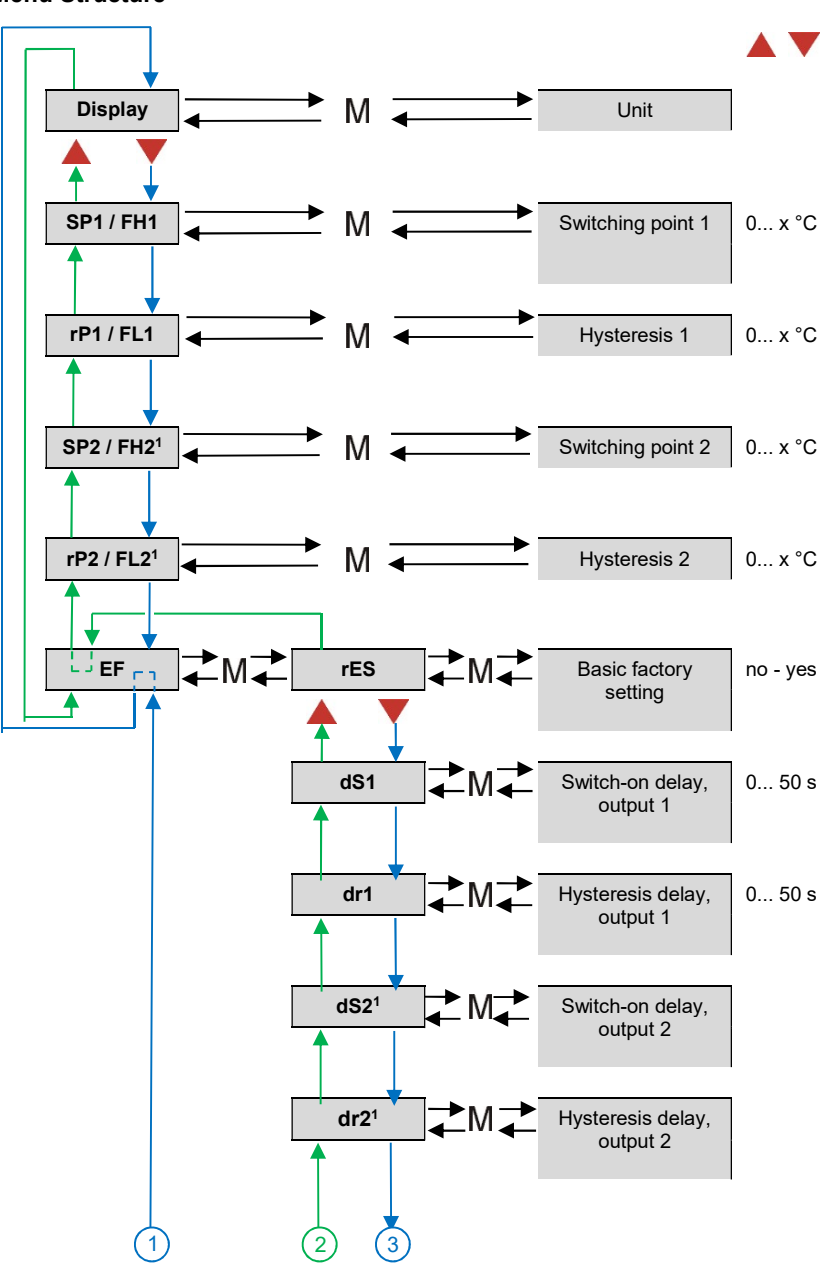

Factory  
setting

3

3

3

3

0 s

0 s

1

4

▲ ▼

Factory  
setting

Hno

PNP

Hno

PNP

°C

I

3

3

0 s


Off

2

3

5

6

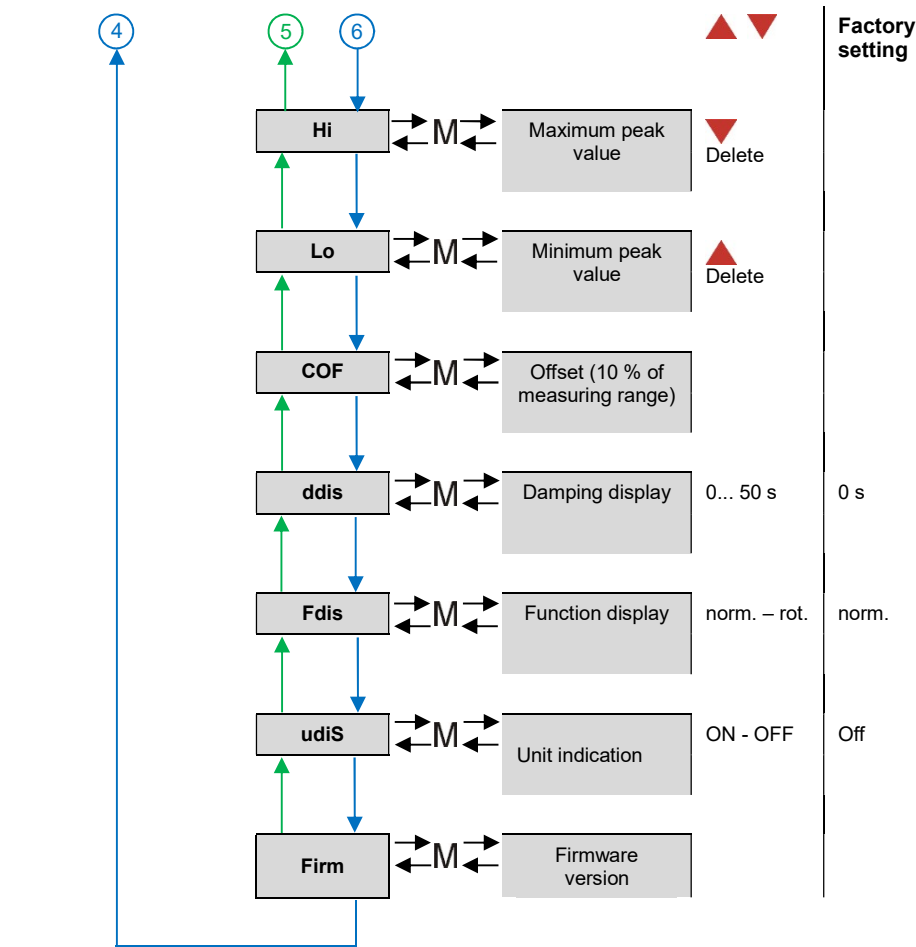


<sup>1</sup> only models with 2nd switching contact

<sup>2</sup> only models with analog output  
(ASP = 0.0 % - 80 % range, AEP = 20.0% - 100 % range; ASP = AEP -20.0 % range)

<sup>3</sup> setting according to measuring range

<sup>4</sup> only IO-link devices

## Software lock

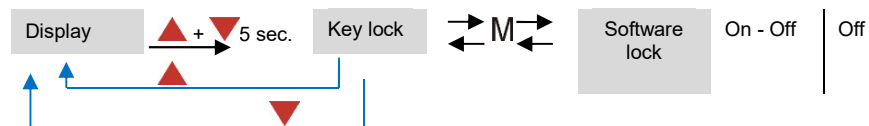

## 9 Maintenance/Cleaning

### Maintenance

The temperature switch requires no maintenance.

### ⚠ WARNING! Risk of injury!

Check the switch for functioning at regular intervals.

If the switch does not work properly, stop operation immediately.

### Cleaning

### ⚠ Attention! Material damage!

The devices may be damaged by the use of unsuitable cleaning agents.

The following cleaning agents can be used for cleaning polycarbonates:

- mild soapy water or detergent
- isopropyl alcohol

Rinse with water immediately after cleaning. No cleaning agent must remain on the surface.

Clean the devices only at room temperature, never in direct sun light.

The following cleaning agents may impair the condition of components from polycarbonate and shall not be used.

- ZEP Fast 505, Pinesol, Formula 409
- brake cleaner
- halogenated solvents
- strong alkaline solutions
- MEK (methyl ethyl ketone)
- abrasives (abrasive additives)

## 10 Decommissioning

### ⚠ DANGER! Electric shock and/or explosion!

Only remove the switch when deenergized (electrically and hydraulically/pneumatically).

Disconnection of the switch from pressure and power supply must be carried out by trained or instructed personnel according to state-of-the-art standards.

### ⚠ WARNING! Hot surfaces!

During operation with higher temperatures the casing surface may become very hot! Wear protective gloves!



**Hitma Instrumentatie**  
www.hitma-instrumentatie.nl  
info@hitma-instrumentatie.nl  
+31 (0)297 - 514 833

**België / Belgique**  
www.hitma-instrumentatie.be  
info@hitma-instrumentatie.be  
+32 (0)2 - 387 28 64